



Pneumatically operated 2/2-way valve with bellows

- High media resistance
- Easy to clean for hygienic applications
- Long service life
- Compact

Product variants described in the data sheet may differ from the product presentation and description.

Can be combined with

	Type 2380 Hygienic 2-way bellows control valve	▶
	Type 8652 AirLINE – the valve island optimised for process automation	▶
	Type 8036 Inline flowmeter with paddle wheel, ELEMENT design	▶
	Type 8098 FLOWave SAW flowmeter	▶

Type description

The valve consists of a pneumatically actuated piston actuator, a stainless steel housing and a bellows element. This bellows element serves primarily as a seat seal, but also to hermetically seal of the media chamber. Due to the comparatively short stroke, these valves achieve a very high number of stroke cycles and short stroke times at relatively high flow rates. These properties make this type of valve ideal for applications in the filling sector, for example. The materials and internal contours used are easy to clean using the CIP / SIP process and the valve body is self-draining when installed in the appropriate position.

The modular design allows it to be equipped with different valve fittings and customised line connections. The pneumatic actuator can be extended with various functions and is preferably controlled externally via a pilot valve or a valve terminal.

An explosion-proof ATEX/IECEx device variant is available.

FLU-TECH CO. LTD.

Email: sales@flutech.co.th **Website:** <https://flutech.co.th>

Tel: 02-384-6060, 086-369-5871-3 **Fax:** 02-384-5701 **LINE OA:** @flutech.co.th

Address (HQ): 845/3-4, Moo 3, Theparak Rd., T. Theparak, A. Mueang Samut Prakan, Samut Prakan, 10270, Thailand



Table of contents

1. General technical data	3
2. Approvals and conformities	4
2.1. General notes	4
2.2. Conformity	4
2.3. Standards	4
2.4. Explosion protection	4
2.5. Foods and beverages/Hygiene	4
3. Materials	5
3.1. Bürkert resistApp	5
3.2. Material specifications	5
4. Dimensions	6
4.1. Actuators	6
4.2. Actuator with flow adjustment	7
4.3. Flange body	8
4.4. Threaded body	9
4.5. Welded body	10
5. Performance specifications	11
5.1. Medium pressure	11
Pressure temperature diagram	11
6. Ordering information	11
6.1. Bürkert eShop	11
6.2. Bürkert product filter	11

1. General technical data

Product properties	
Dimensions	Further information can be found in chapter "4. Dimensions" on page 6.
Material	
Body	Stainless steel 316Ti (1.4571), for flange 316L (1.4404)
Actuator	Stainless steel 304L (1.4301)
Bellows	Advanced PTFE
Wetted material	Stainless steel 316Ti (1.4571), 316L (1.4404), advanced PTFE
Standard surface quality	Ra ≤ 0.76 µm
Flow direction	Below seat (pressure on port connection 2)
Actuator size	Piston diameter 32 mm
Actuator variant	Control function A (NC) Control function B (NO)
Performance data	
Switching time	Control function A (NC) at 6 bar PSt: open: approx. 25 ms, close: approx. 55 ms (Guide values! Actual values depend on surrounding peripherals)
Pilot air pressure	4.5...10 bar
Pilot air ports	M5, G 1/8
Seat leakage	5 N _m /min, measured with air 8 bar, below seat
Pressure range	-0.9...8 bar
Medium data	
Process medium	Neutral and aggressive gases and liquids (see resistance chart ►)
Medium temperature	See "5.1. Medium pressure" on page 11
Control medium	Neutral gases, air
Process/Port connection & communication	
Nominal diameter (port connection)	...DN 10 resp. DN 1/2
Port connection	Thread, weld, flange (others on request)
Environment and installation	
Installation position	See operating manual Type 2080 ►
Ambient temperature	-10...+90 °C

2. Approvals and conformities

2.1. General notes

- The approvals and conformities listed below must be stated when making enquiries. This is the only way to ensure that the product complies with all required specifications.
- Not all available versions can be supplied with the below mentioned approvals or conformities.

2.2. Conformity

In accordance with the Declaration of Conformity, the product is compliant with the EU Directives.

2.3. Standards

The applied standards which are used to demonstrate compliance with the EU Directives are listed in the EU-Type Examination Certificate and/or the EU Declaration of Conformity.

2.4. Explosion protection


Approval	Description																
 	Optional: Explosion protection (valid for the variable code PX51) As a category 2 device suitable for zone 1/21 and zone 2/22. ATEX: EPS 18 ATEX 2 008 X II 2G Ex h IIC T4...T2 Gb II 2D Ex h IIC T135 °C...T300 °C Db IECEx: IECEx EPS 18.0007X Ex h IIC T4...T2 Gb Ex h IIC T135 °C...T300 °C Db <table><tr><td>Temperature class</td><td>T2</td><td>T3</td><td>T4</td></tr><tr><td>Permissible surface temperature</td><td>+ 300 °C</td><td>+ 200 °C</td><td>+ 135 °C</td></tr><tr><td>Ambient temperature</td><td>- 40...+ 130 °C</td><td>- 40...+ 130 °C</td><td>- 40...+ 100 °C</td></tr><tr><td>Maximum medium temperature</td><td>+ 285 °C</td><td>+ 185 °C</td><td>+ 125 °C</td></tr></table>	Temperature class	T2	T3	T4	Permissible surface temperature	+ 300 °C	+ 200 °C	+ 135 °C	Ambient temperature	- 40...+ 130 °C	- 40...+ 130 °C	- 40...+ 100 °C	Maximum medium temperature	+ 285 °C	+ 185 °C	+ 125 °C
Temperature class	T2	T3	T4														
Permissible surface temperature	+ 300 °C	+ 200 °C	+ 135 °C														
Ambient temperature	- 40...+ 130 °C	- 40...+ 130 °C	- 40...+ 100 °C														
Maximum medium temperature	+ 285 °C	+ 185 °C	+ 125 °C														

2.5. Foods and beverages/Hygiene

Conformity	Description
FDA	FDA – Code of Federal Regulations The bellows of advanced PTFE comply with the Code of Federal Regulations published by the FDA (Food and Drug Administration, USA).
USP	United States Pharmacopeial Convention (USP) The bellows of advanced PTFE are tested according to USP Class VI.
	EC Regulation 1935/2004 of the European Parliament and of the Council The bellows of advanced PTFE are suitable for use with food and beverages (according to EC Regulation 1935/2004/EC).

3. Materials

3.1. Bürkert resistApp

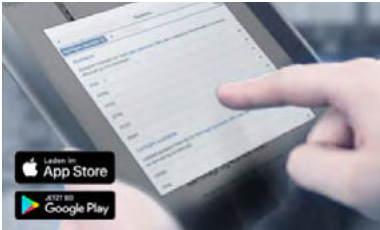


Bürkert resistApp – Chemical resistance chart

You want to ensure the reliability and durability of the materials in your individual application case? Verify your combination of media and materials on our website or in our resistApp.

[Start chemical resistance check](#)

3.2. Material specifications


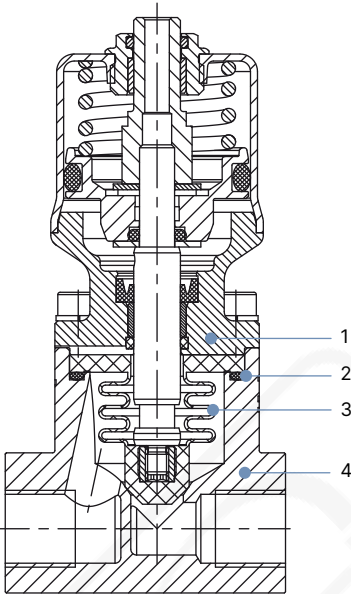


No.	Element	Material
1	Actuator	Stainless steel
2	O-ring	FKM (non-wetted)
3	Bellows	Advanced PTFE
3	Body	Stainless steel

4. Dimensions

4.1. Actuators

Note:
Dimensions in mm

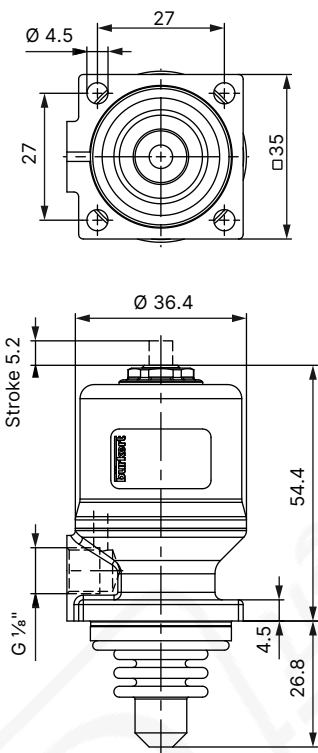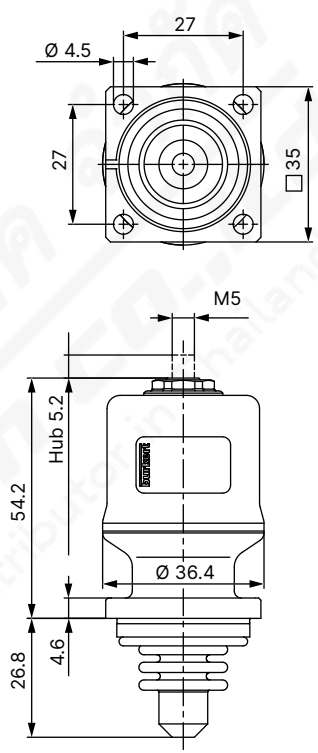G 1/8 pilot air port (AG01)	M5 pilot air port (AG02)
Control function A available	Control function A/Control function B available
	


Single actuators	Article no.	
	AG01	AG02
Control function A	20100585 	20100586 
Control function B	-	20100587 

- = not available

4.2. Actuator with flow adjustment

Note:

- Dimensions in mm
- Due to the M8×1 thread that is used, suitable initiators can be screwed in as an alternative and thus query the open actuator position.

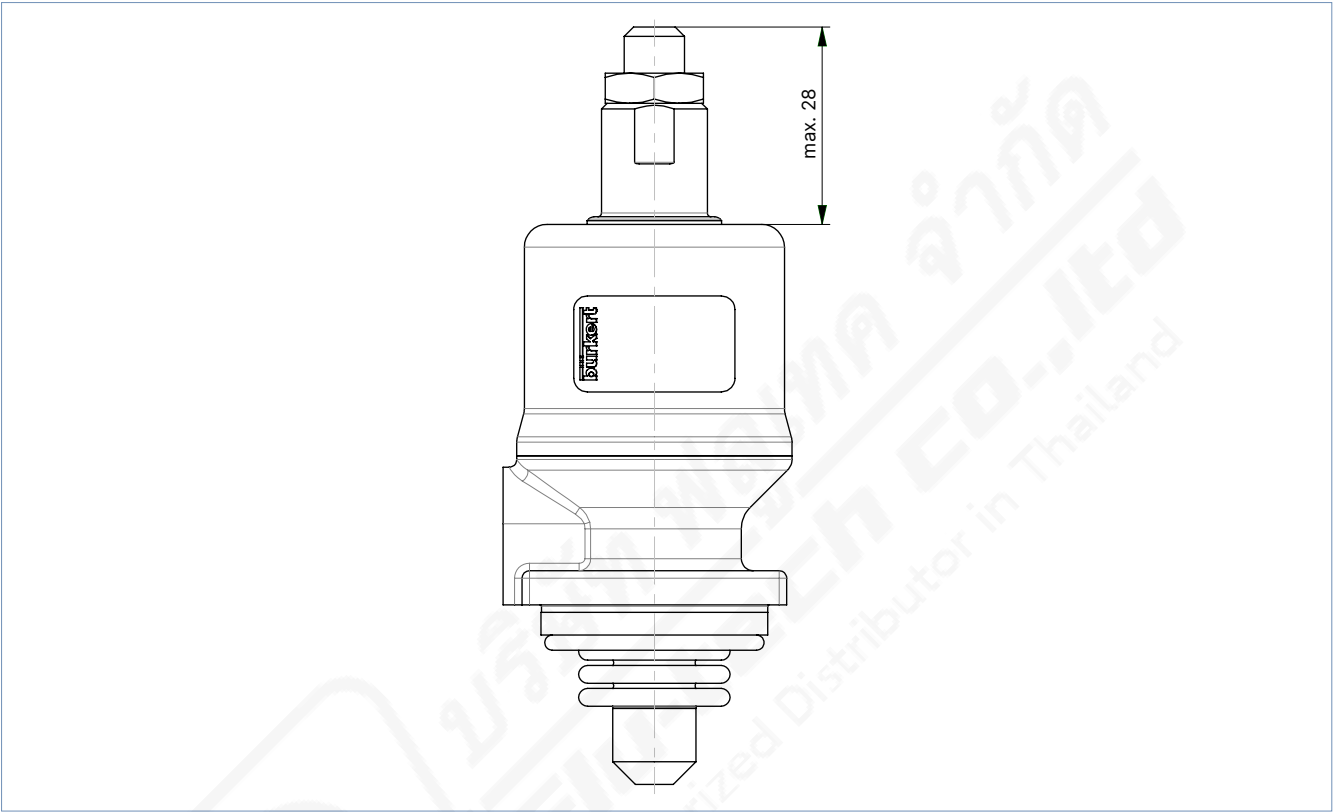


Actuator individually with flow rate adjustment (MJ33)	Article no.	
	AG01	AG02
Control function A	20104851	–
Control function A retrofit set for flow rate adjustment	20061596	–

– = not available

4.3. Flange body

Note:
Dimensions in mm

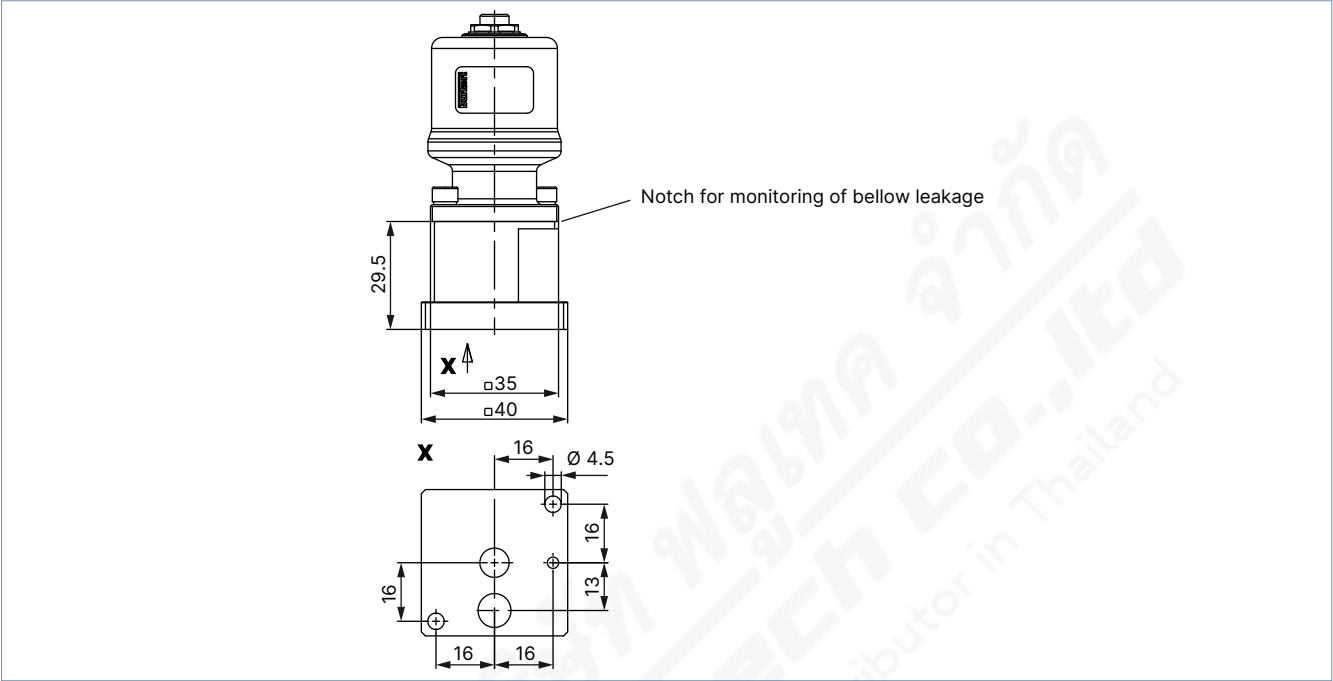


LTA Flange	Article no.	
	AG01	AG02
Control function A Flange pattern type 2090 (cable connection FK11)	20104726 𐆶	20104841 𐆶
Control function B Flange pattern type 2090 (cable connection FK11)	–	20104727 𐆶

– = not available

4.4. Threaded body


Note:
Dimensions in mm

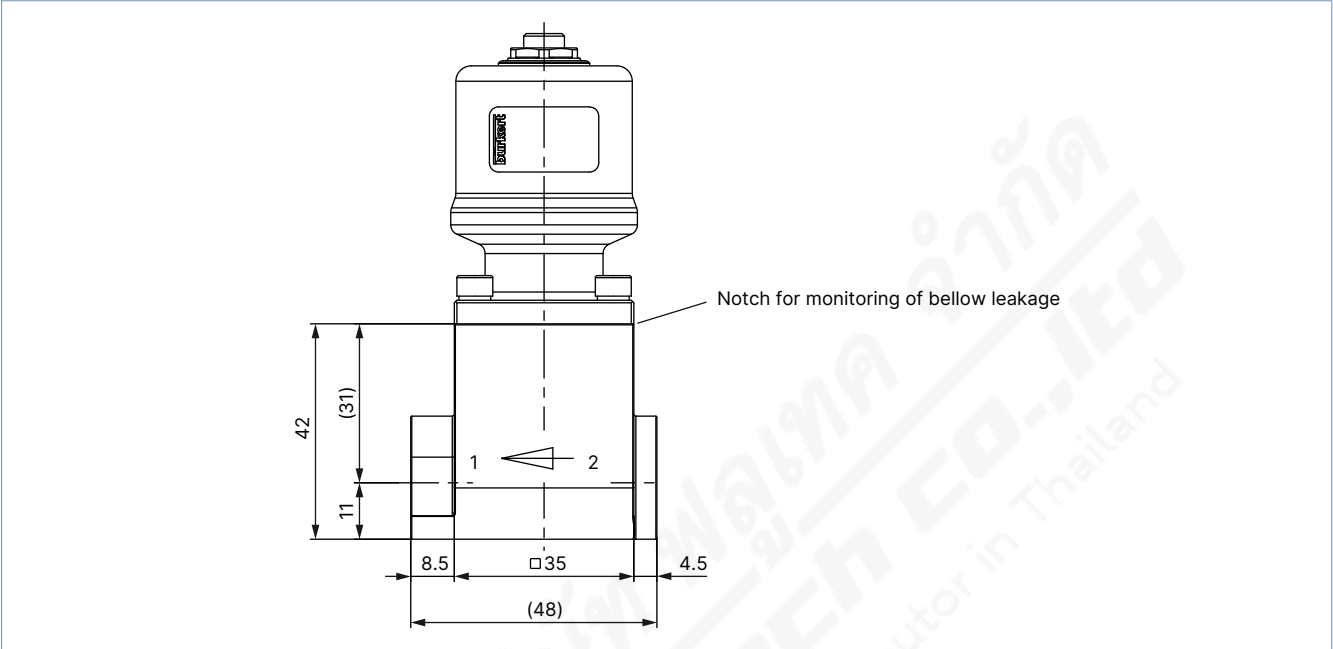

LTA threaded socket	Article no.	
	AG01	AG02
Control function A G 1/4" socket (pipe connection GM82)	20104734 𐆶	20104736 𐆶
Control function A G 3/8" socket (pipe connection GM83)	20104735 𐆶	20104737 𐆶

4.5. Welded body

Note:
Dimensions in mm

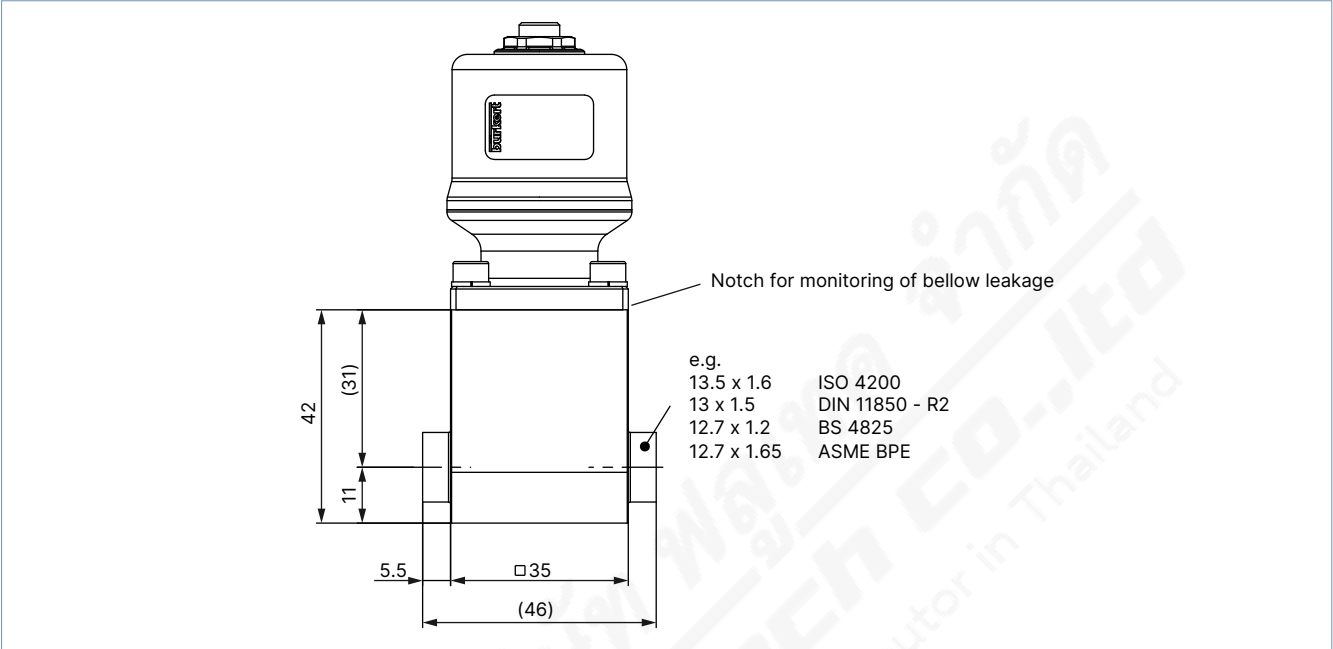


LTA welded connection	Article no.	
	AG01	AG02
Control function A welding connection ISO Ø 13.5 × 1.6 (cable connection SA40)	20104751 𐤀	20104752 𐤀
Control function B welding connection ISO Ø 13.5 × 1.6 (cable connection SA40)	–	20104753 𐤀
Control function A welding connection ASME BPE Ø 12.7 × 1.65 (cable connection SA92)	20104754 𐤀	20104755 𐤀
Control function B welding connection ASME BPE Ø 12.7 × 1.65 (cable connection SA92)	–	20104756 𐤀
Control function A welding connection DIN Ø 13.5 × 1.5 (cable connection SD40)	20104765 𐤀	20104766 𐤀
Control function B welding connection DIN Ø 13.5 × 1.5 (cable connection SD40)	–	20104767 𐤀

– = not available

5. Performance specifications

5.1. Medium pressure

Pressure temperature diagram

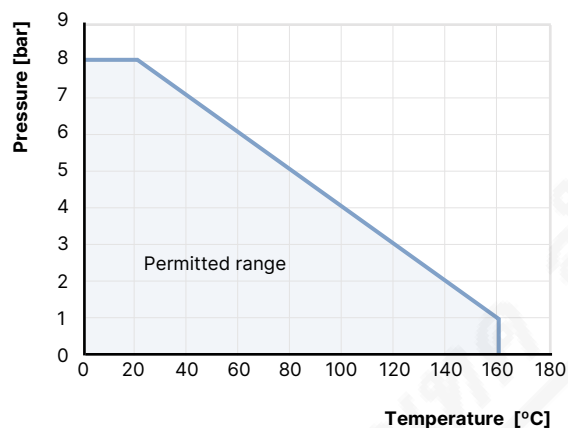

6. Ordering information

6.1. Bürkert eShop



Bürkert eShop – Easy ordering and quick delivery

You want to find your desired Bürkert product or spare part quickly and order directly? Our online shop is available for you 24/7. Sign up and enjoy all the benefits.

[Order online now](#)

6.2. Bürkert product filter



Bürkert product filter – Get quickly to the right product

You want to select products comfortably based on your technical requirements? Use the Bürkert product filter and find suitable articles for your application quickly and easily.

[Try out our product filter](#)